




Hardware

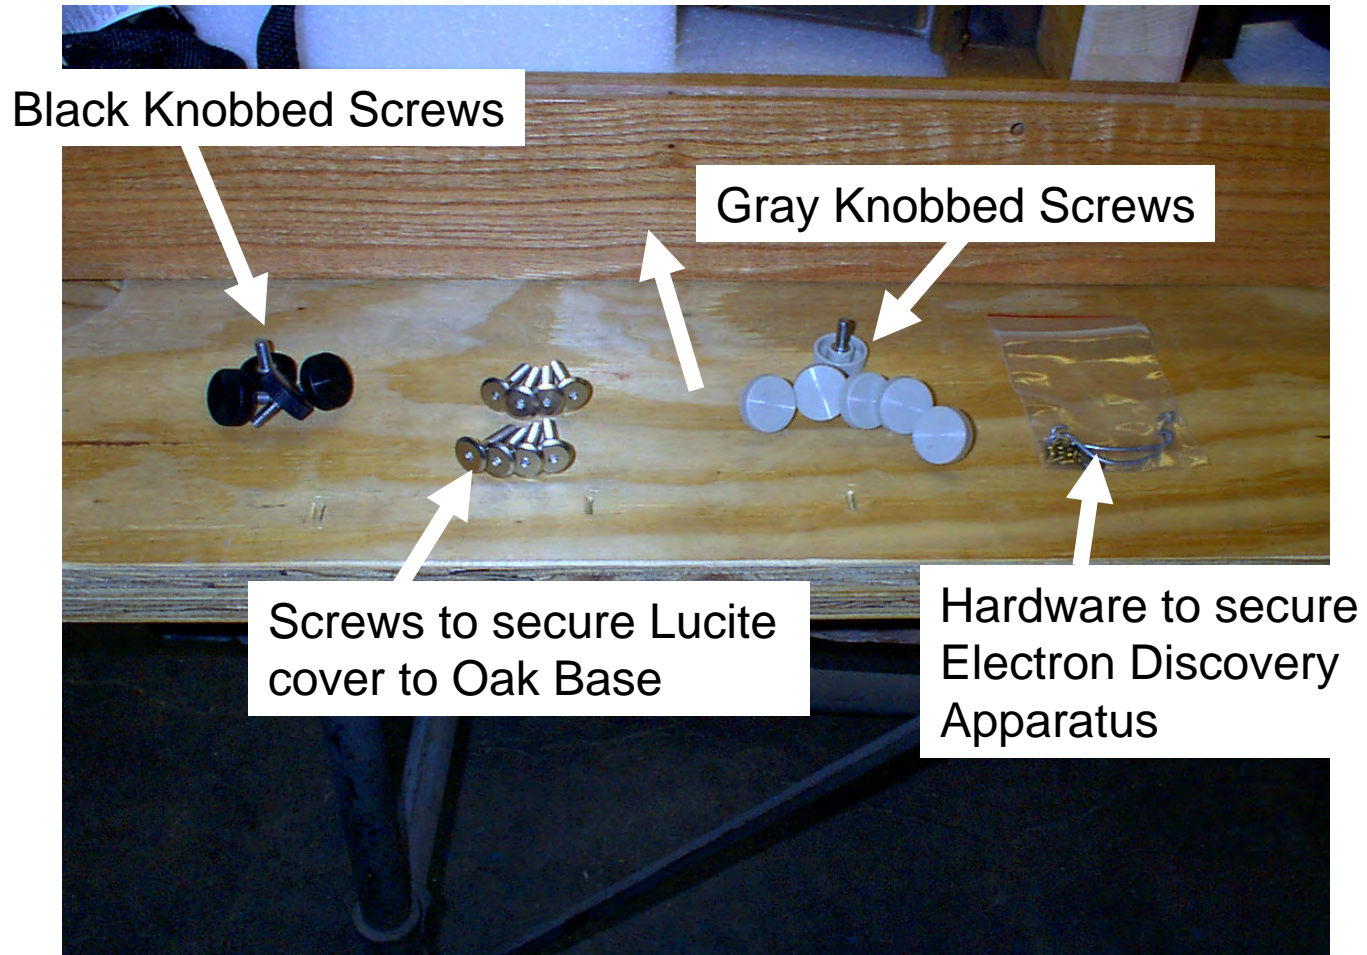

Shipping Container Base

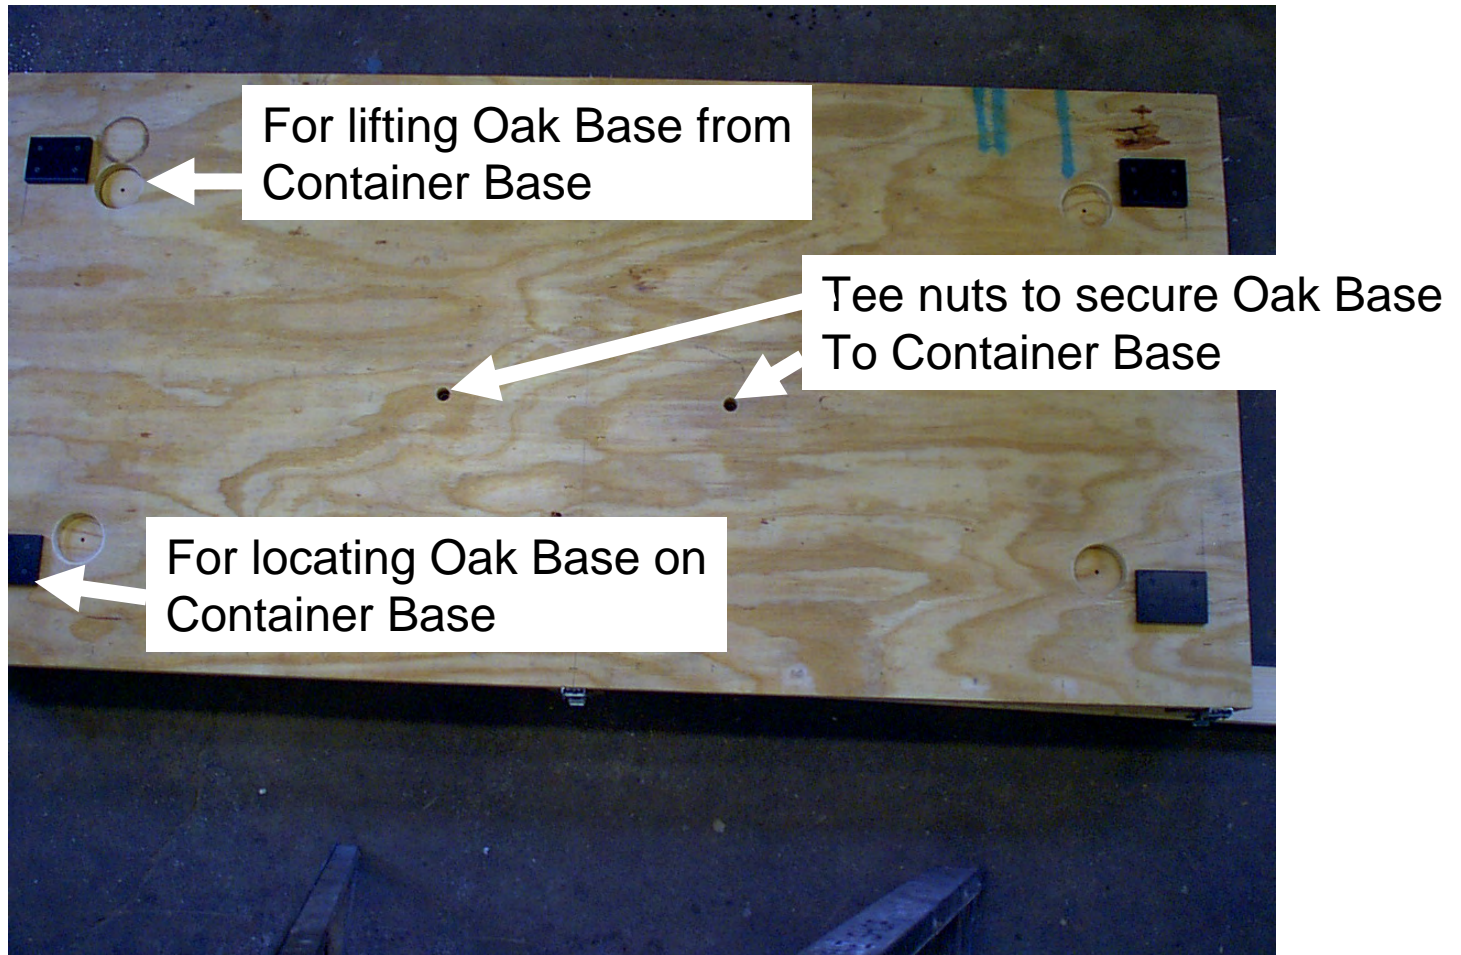

Securing Oak Base to Shipping Container Base

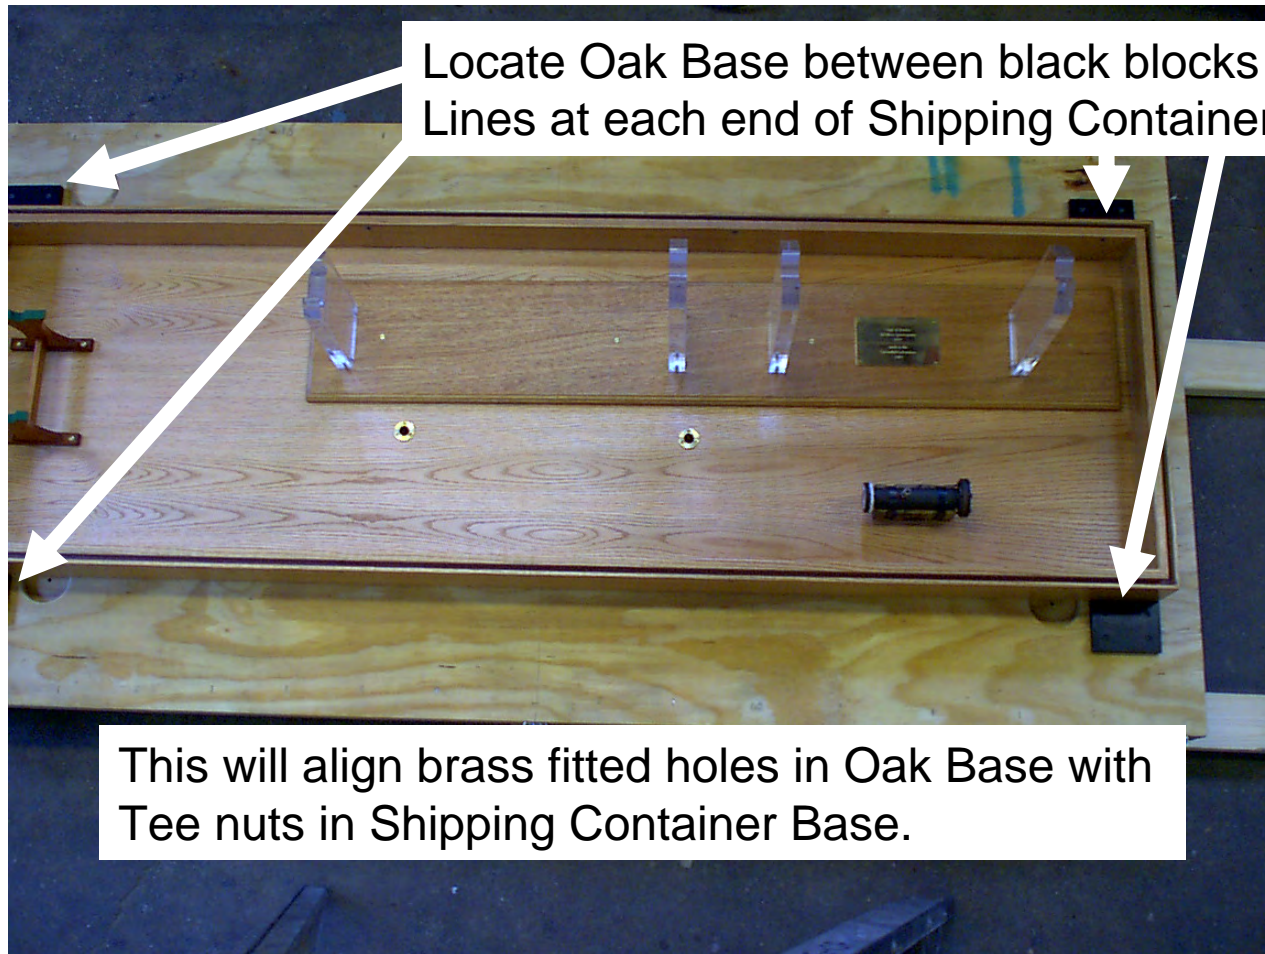

Locate Oak Base between black blocks and Lines at each end of Shipping Container Base.


This will align brass fitted holes in Oak Base with Tee nuts in Shipping Container Base.

Securing Oak Base with Threaded Rod


1) Screw threaded rods through brass fitted holes in Oak Base into Tee nuts in Shipping Container Base.

3) Thread black strap under mahogany base through slot at bottom.

2) Then screw white nuts onto threaded rods to secure Oak Base to Shipping Container Base. Tighten securely!

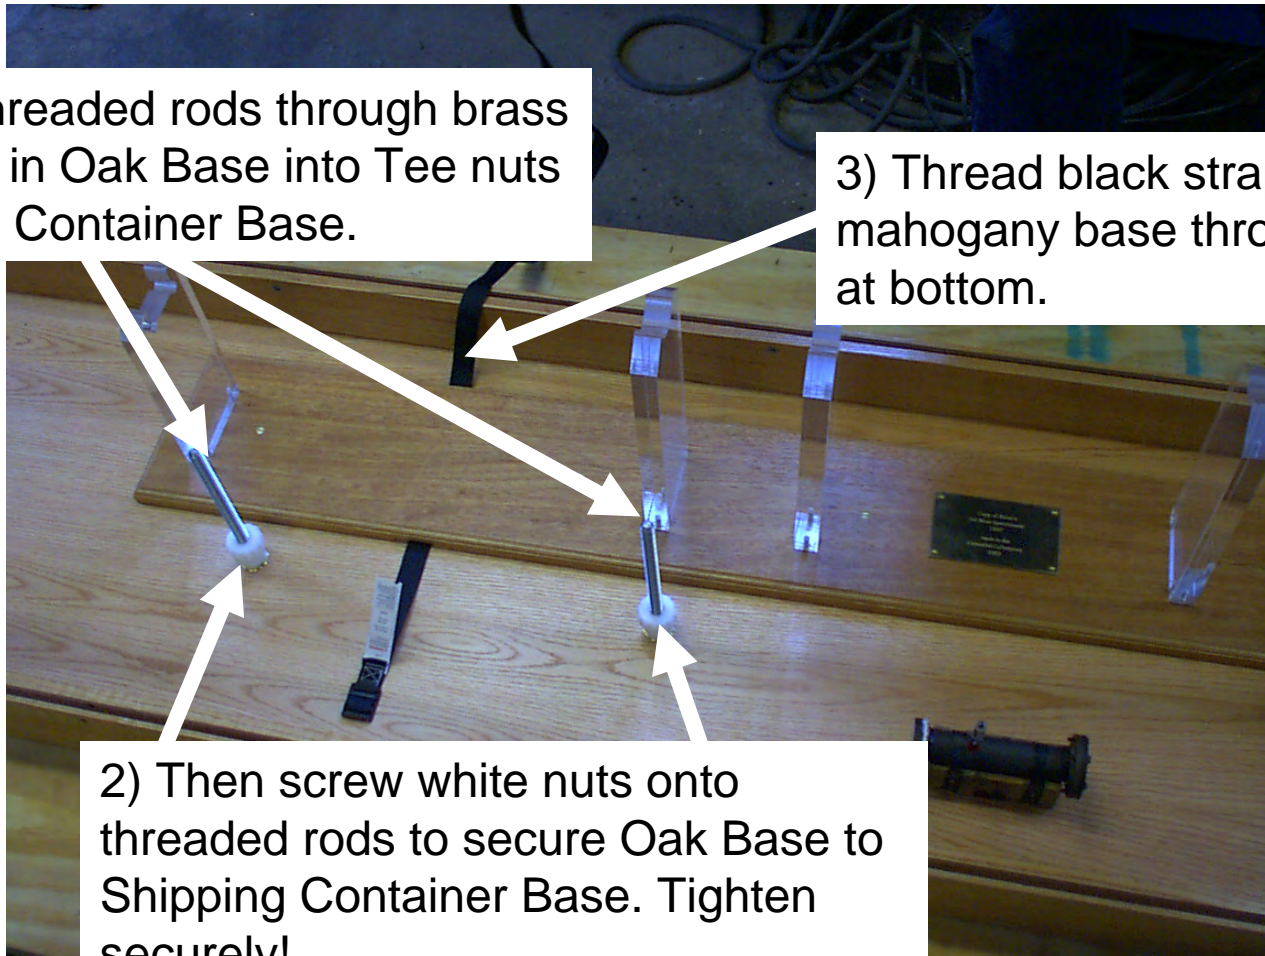

Installation of foam packing

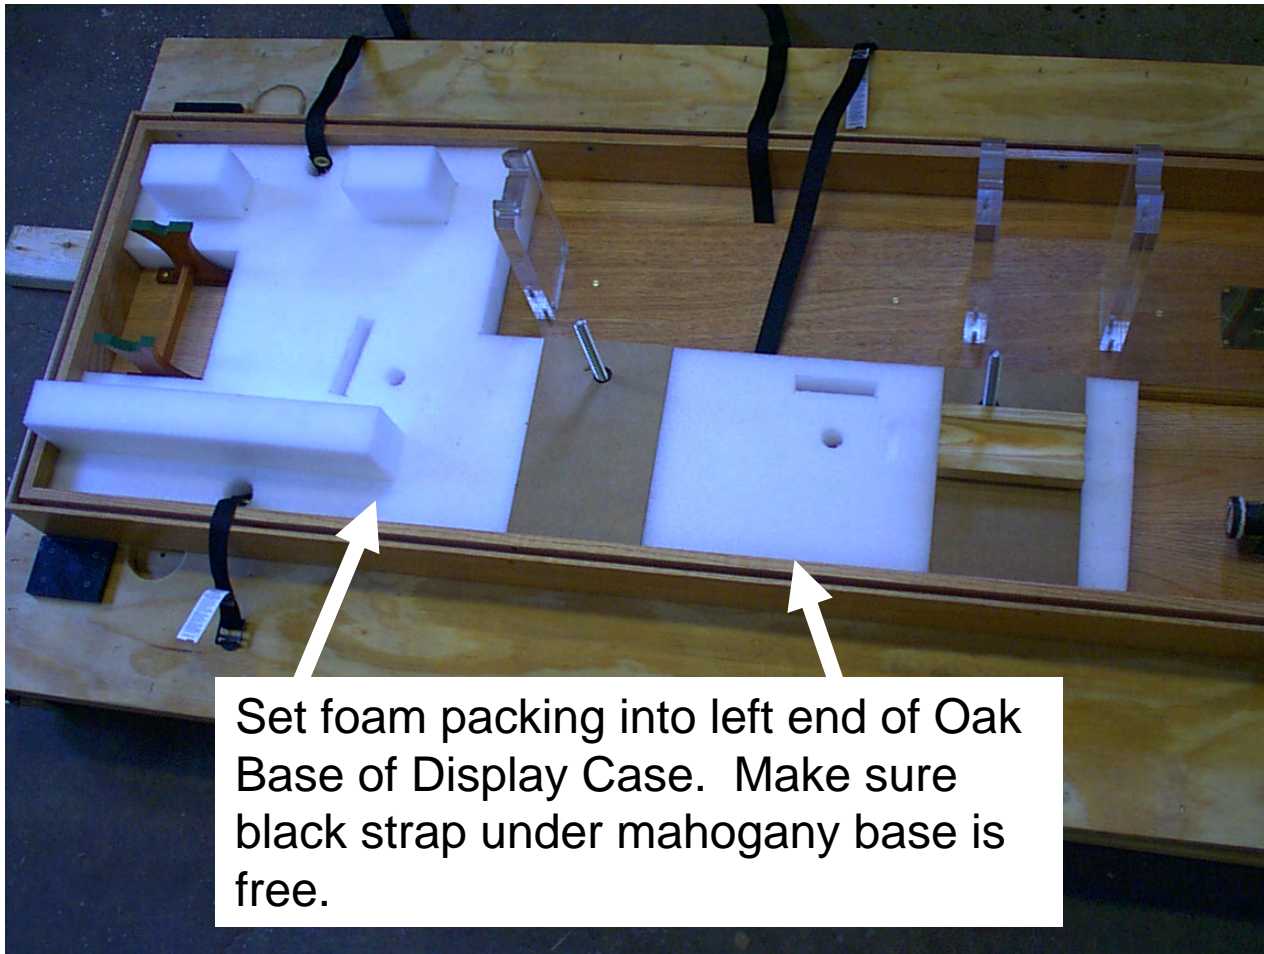

Locating Aston's 3rd MS for shipping



Securing MS for shipping




Place fittings and hardware as shown for securing MS for shipping. Tighten wing nuts securely!

Placing 2 smaller cartons for shipping


Carton contains Brass Electrostatic Analyzer

Carton contains Electron Discovery Apparatus.

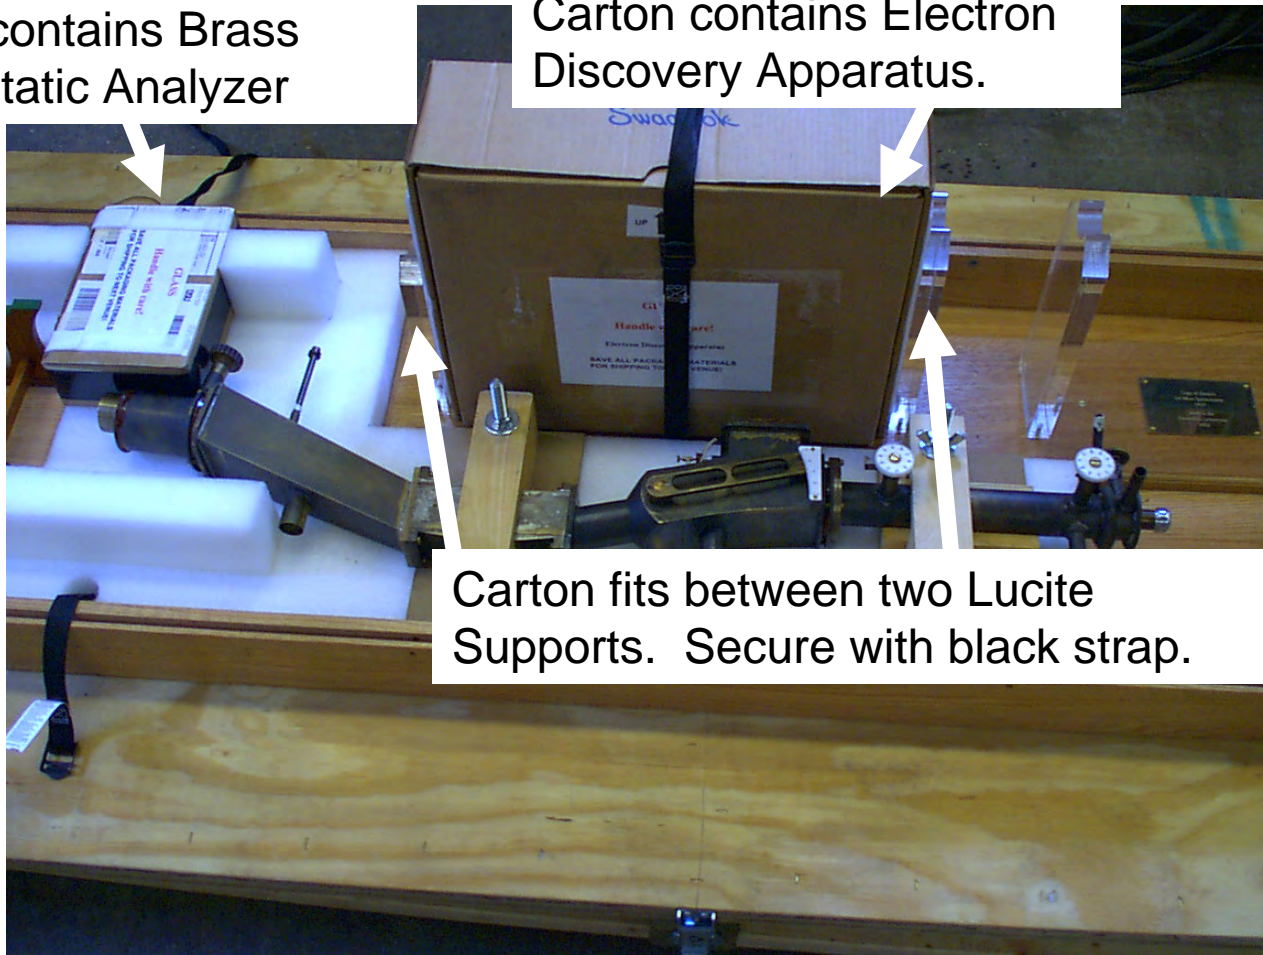


Carton fits between two Lucite Supports. Secure with black strap.

Placing large carton for shipping

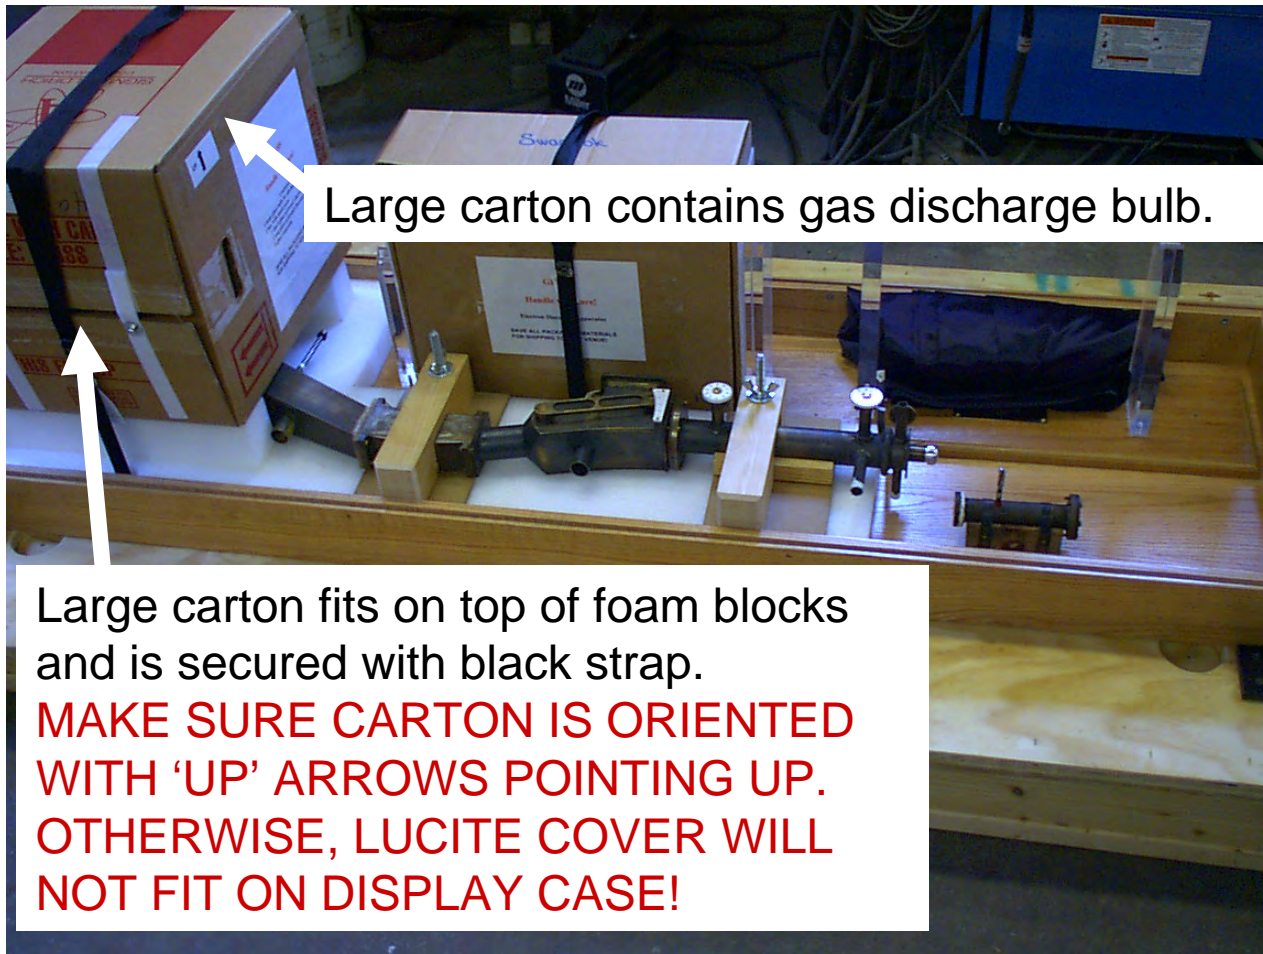


Installing Lucite cover for shipping

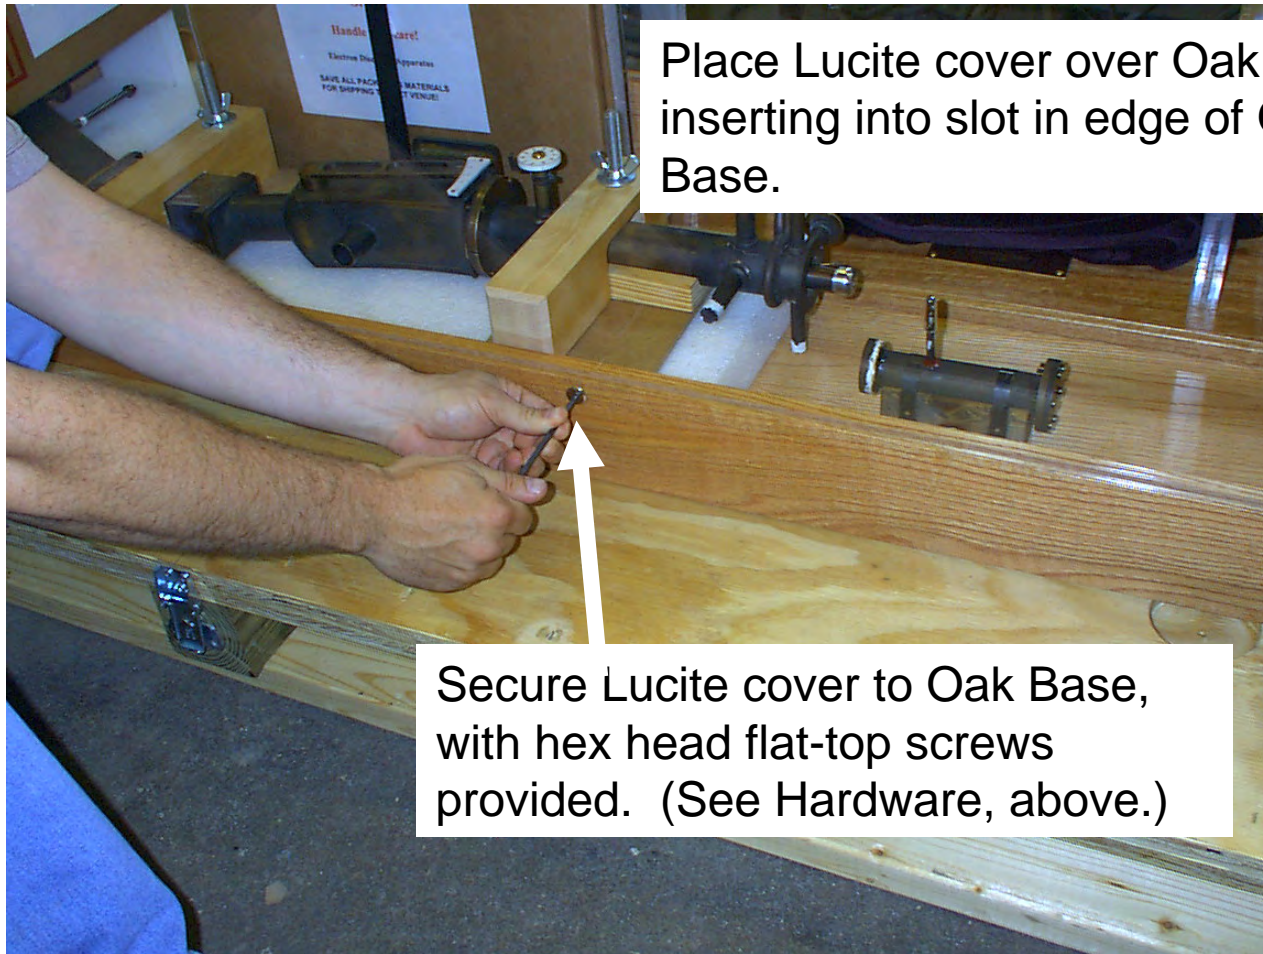

Place Lucite cover over Oak Base, inserting into slot in edge of Oak Base.

Secure Lucite cover to Oak Base, with hex head flat-top screws provided. (See Hardware, above.)


Cover Display

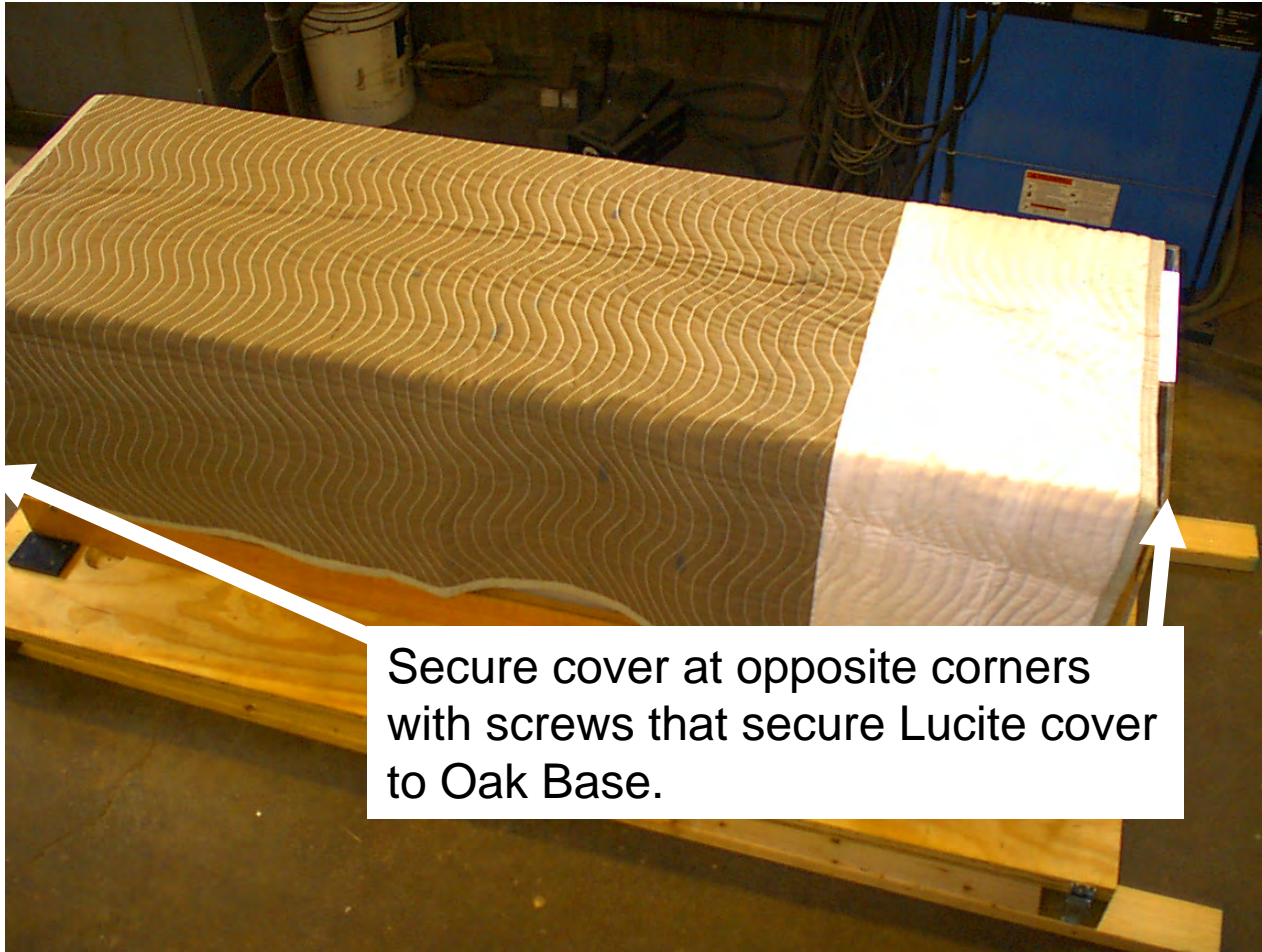

Secure cover at opposite corners with screws that secure Lucite cover to Oak Base.

Locate and Secure Middle Shipping Container

Lift Middle Shipping Container to clear exhibit on Shipping Base and lower to Shipping Base. Wooden corner blocks on Shipping Base will help locate.

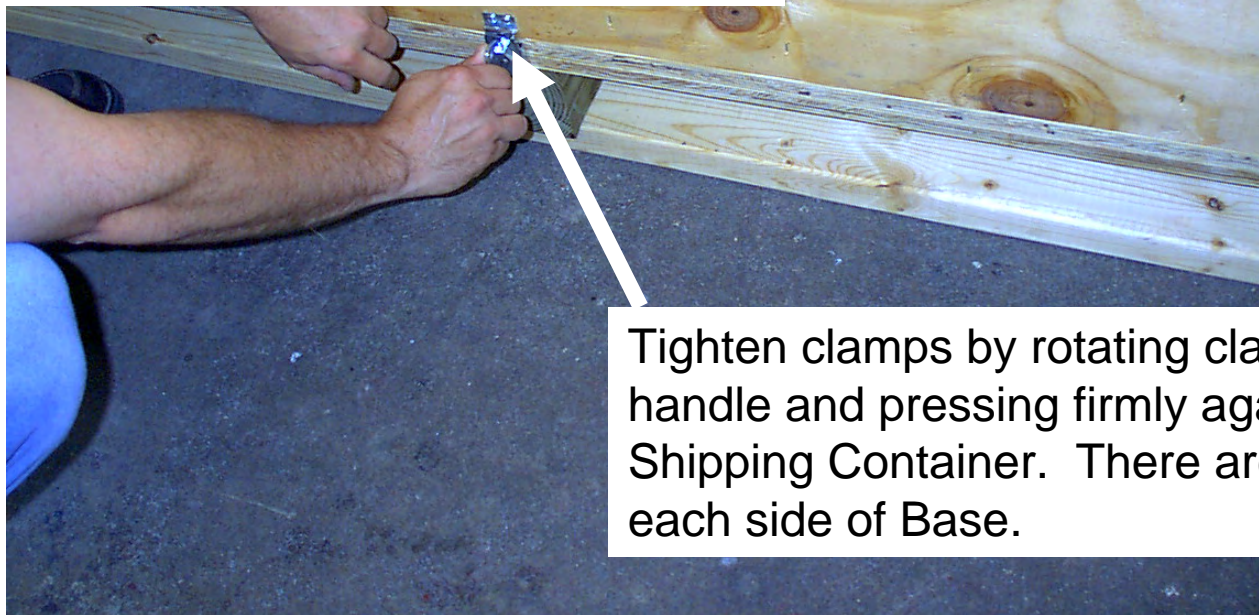


Tighten clamps by rotating clamp handle and pressing firmly against Shipping Container. There are 3 on each side of Base.


Load Display Table into Middle Container




Secure Display Table to Middle Container

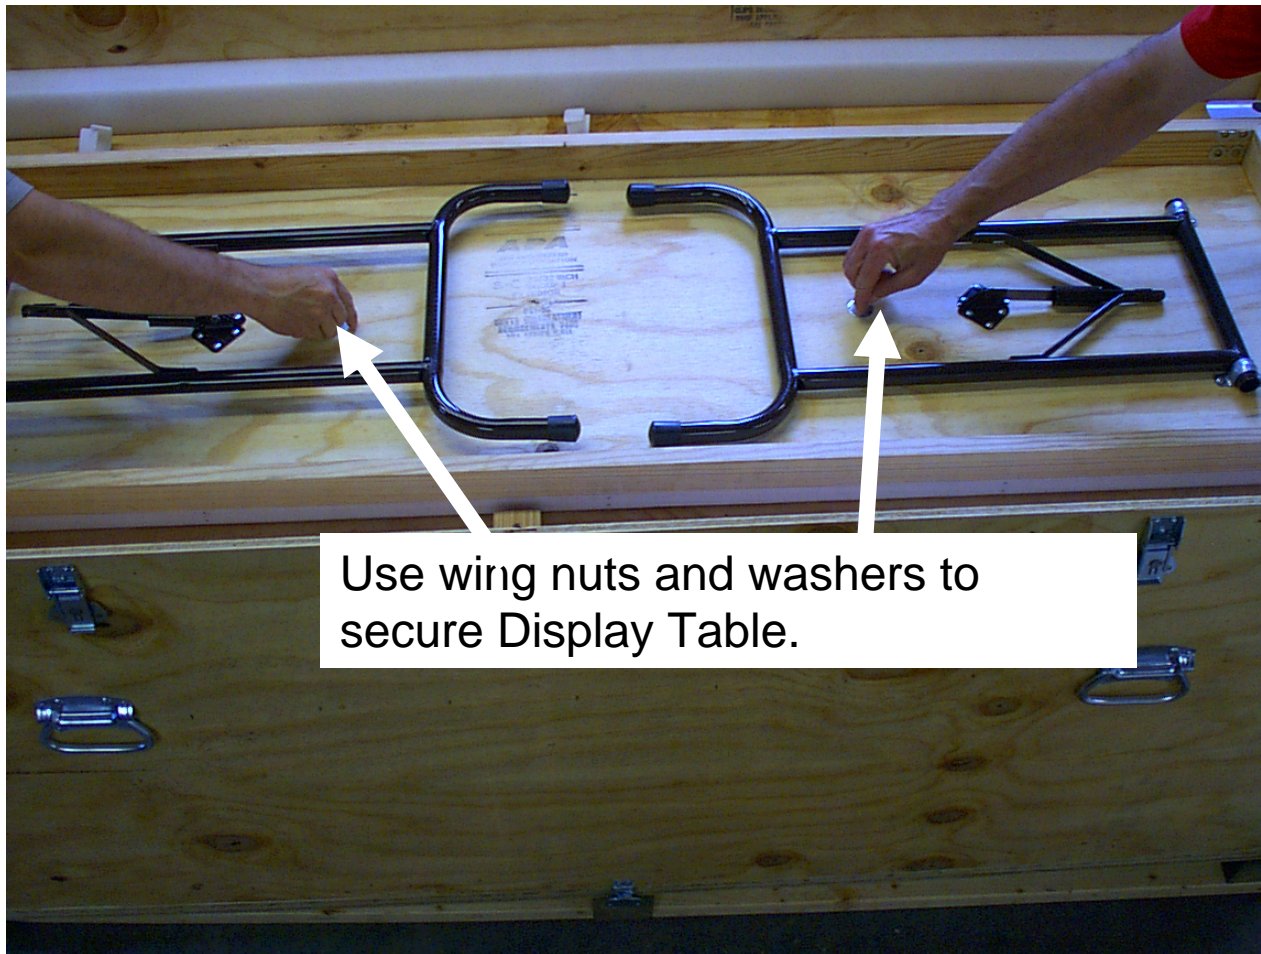

Secure Extension Supports

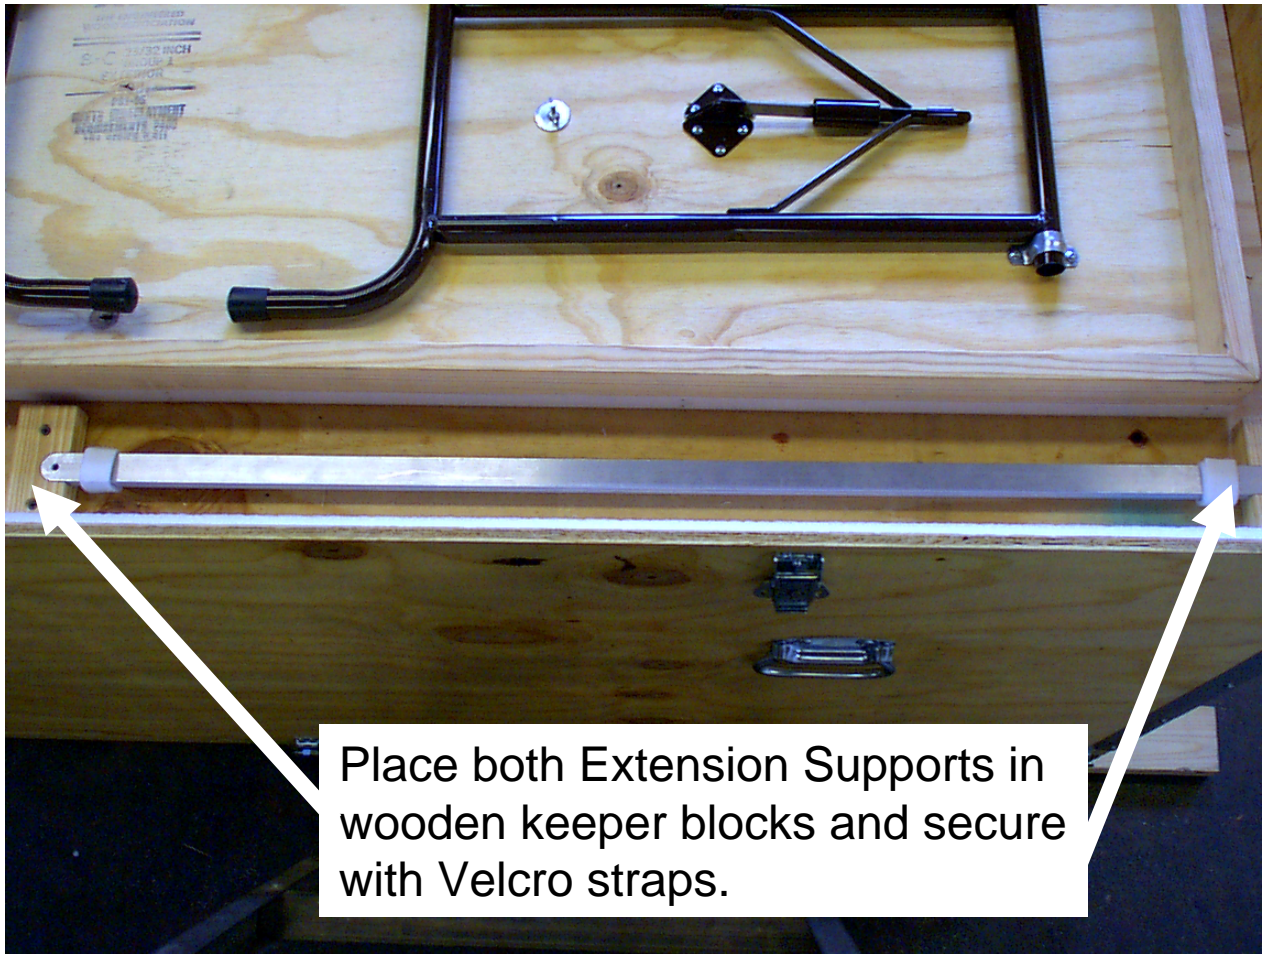

Securing Poles

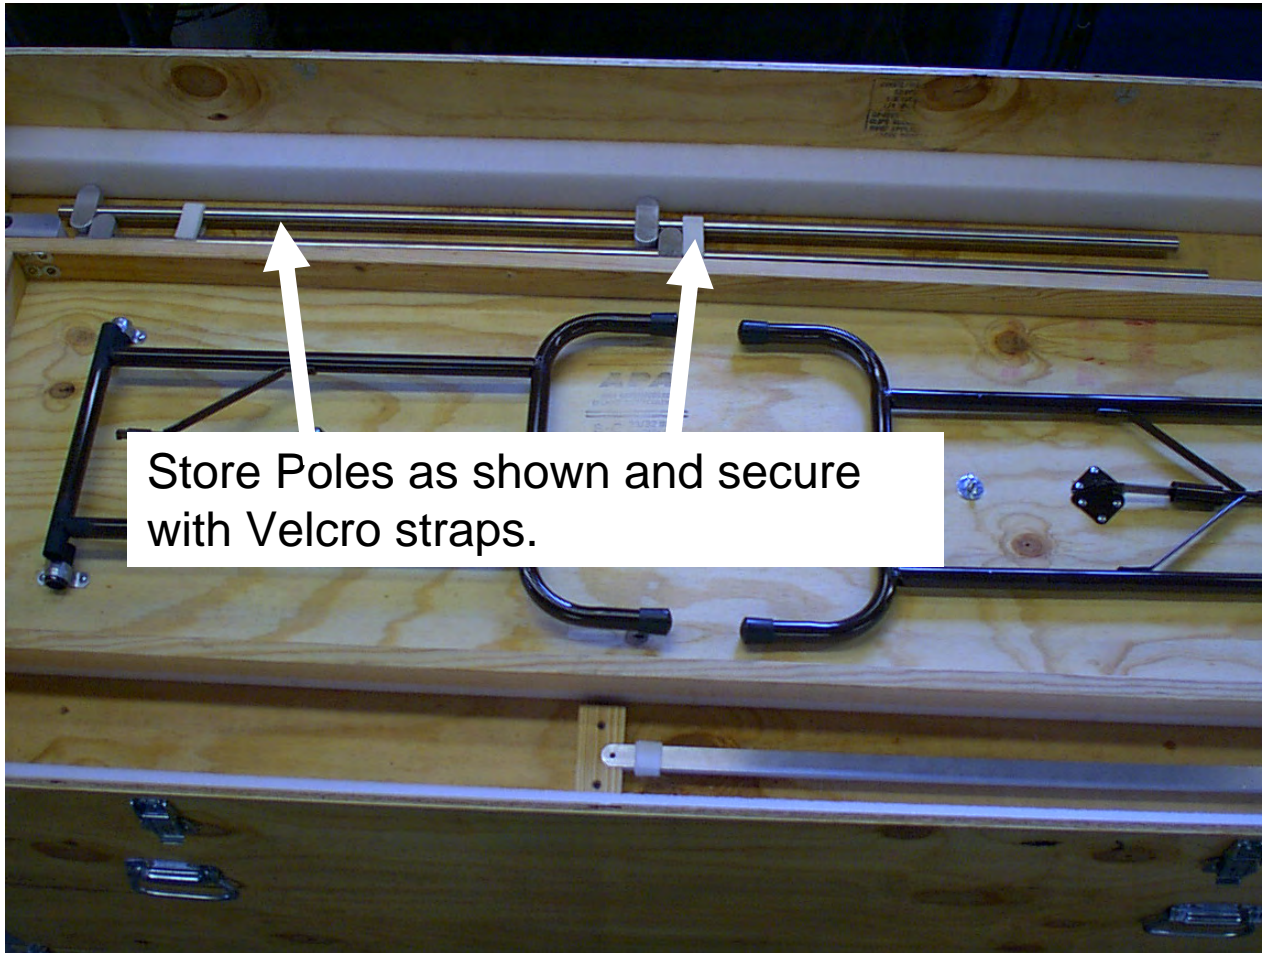


Store Poles as shown and secure with Velcro straps.

Insert Foam Padding in Middle Shipping Container




Place Exhibit Panels for Shipping

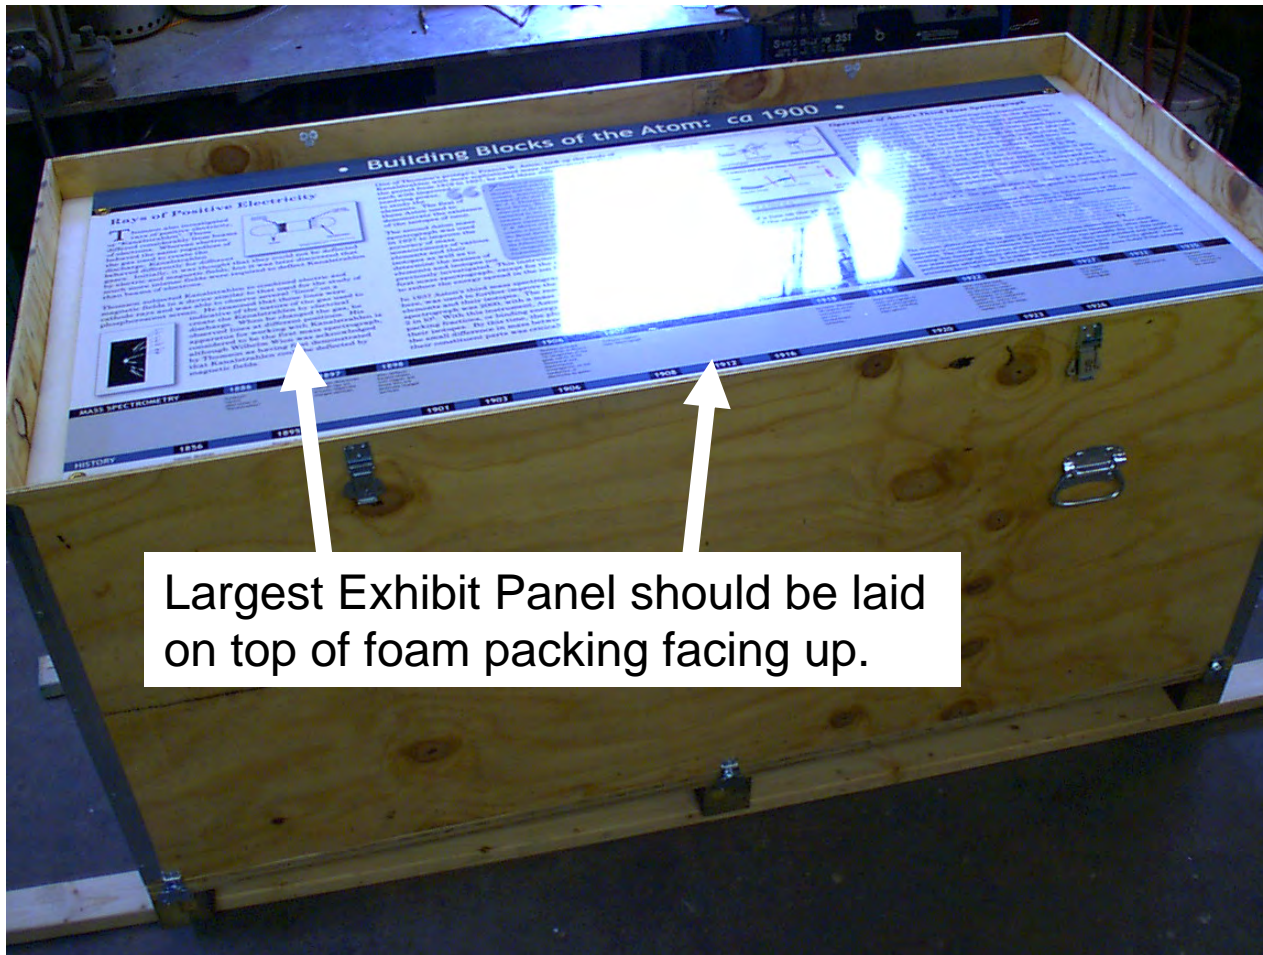

Largest Exhibit Panel should be laid on top of foam packing facing up.

Layer remaining Exhibit Panels

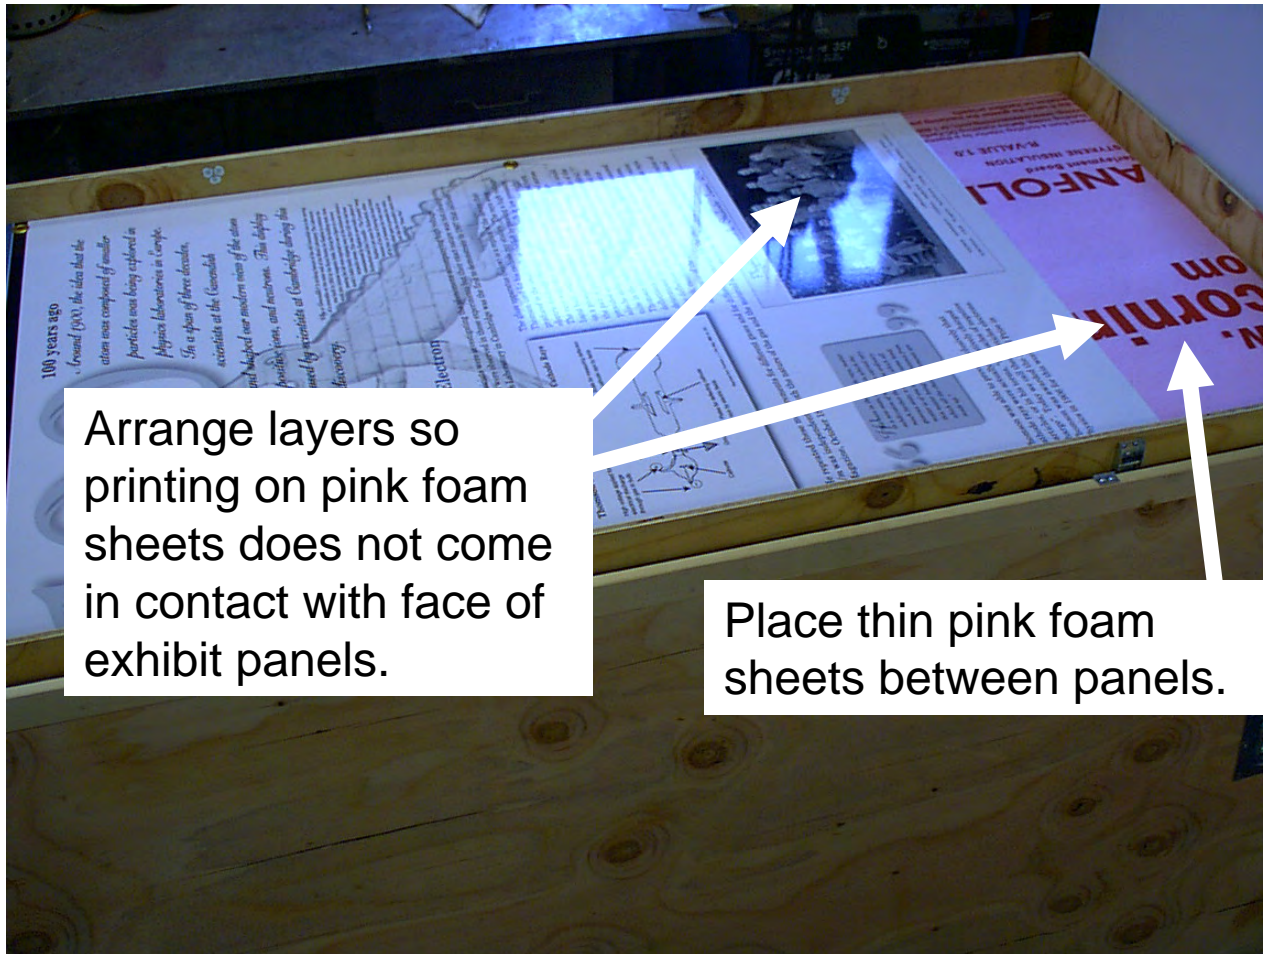

Arrange layers so printing on pink foam sheets does not come in contact with face of exhibit panels.

Place thin pink foam sheets between panels.

Secure Lid to Shipping Container



Tighten Clamps




Screw end clamps for security



Completely packaged



Moving Options

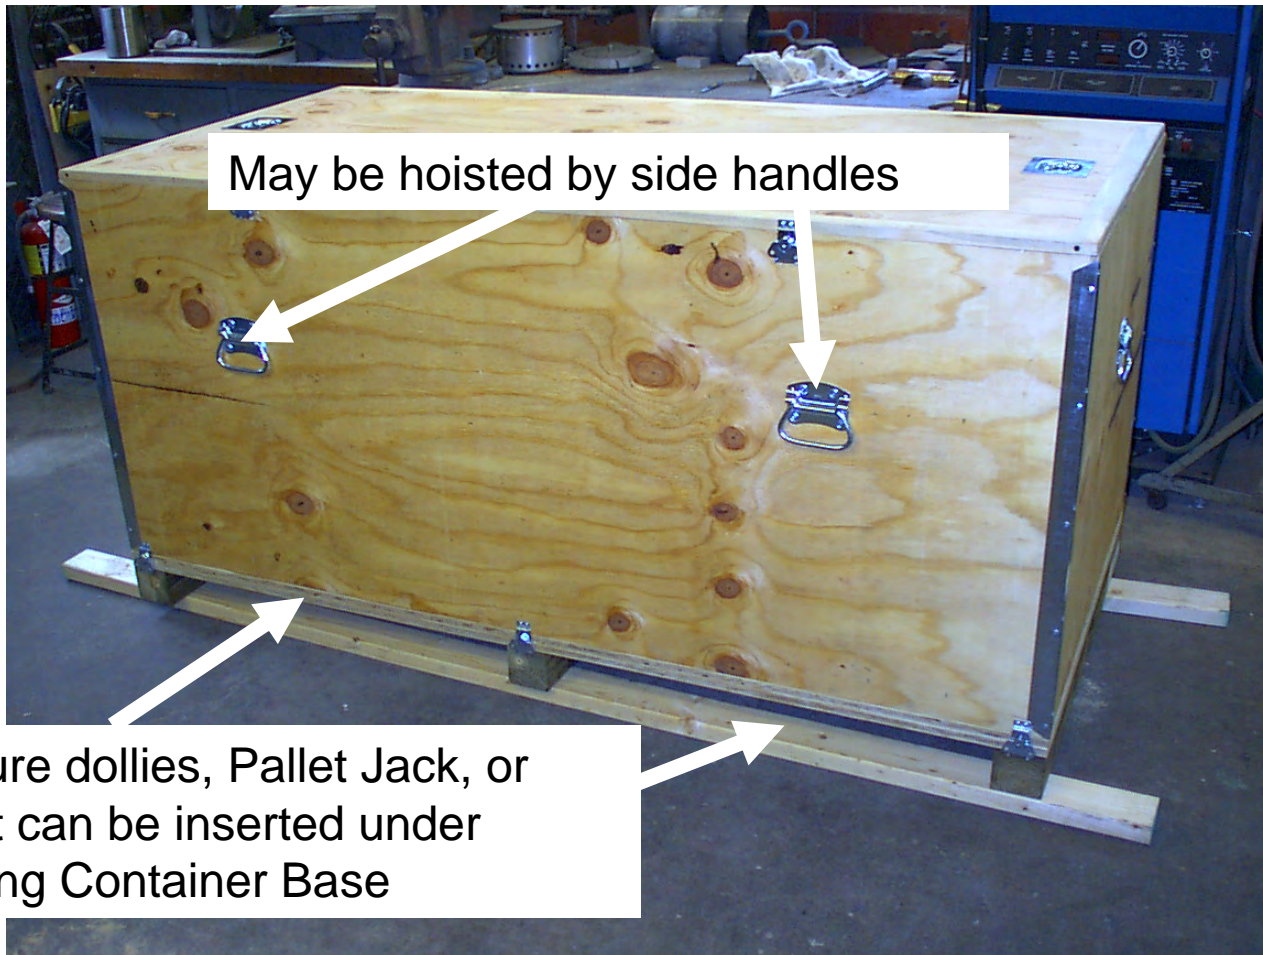

May be hoisted by side handles

Furniture dollies, Pallet Jack, or Forklift can be inserted under Shipping Container Base